





Q: What is an Idle Shutdown Timer?

A: The *Idle Shutdown Timer* (also know as the *IST*) is a *vehicle parameter set by the service technician(s)*. Generally speaking, it is set most frequently at 5 minutes, but ranges from 5 to 15 minutes in most cases.

When the truck recognizes that it is in an idle state, the timer begins. Depending on the vehicle, a dash light may be triggered in the last 30 seconds- 1 minute to alert the driver the vehicle is about to shut off. Some vehicles have an audible alert as well.

If the driver is in the vehicle and sees these alerts, the driver can reset the *IST* by letting off and reapplying the brakes, or by simply pressing the accelerator ("gas pedal").

If no action is taken, the truck shuts itself off once the time limit is met.

<u>Click Here</u> or the image above to view Cummins' video: On Highway Electronic Engine Features - Idle Shutdown.

Idealease is committed to helping your team Elevate their Performance. You will receive a weekly Question or Tip of the Week explaining different elements of the scorecard, tips to improve Key Performance Indicators (KPI's), or other motivational topics to keep the team (s) striving for excellence behind the wheel. If you have a question or would like a topic covered, please email **jerryring@idealease.com**.



Mailing Address: 430 North Rand Road North Barrington, IL 60010



Copyright © 2019, All rights reserved.

ELEVATE: QUESTION/TIP OF THE WEEK SIGNUP

Email *		
First Name '	•	
Last Name *		
Job Title *		
Company *		
SUBMIT		
Clic	<u>ck Here To Register</u>	

update subscription preferences

Is this email not displaying correctly? <u>View it in your browser</u>.